MOUNTING INSTRUCTION FOR UL-35 KODAK 14n KIT

For horizontal (landscape mode) use of the camera you will need to mount the SLR base part first, before mounting the Kodak 14n onto this base mount on the rear standard of the Ultima 35.

For vertical (portrait mode) use of the camera the L-bracket can be mounted to the basepart before attaching the Kodak to the L-Bracket.



Mount the part A into the dovetail mount on the rear standard of the Ultima. Fix it with the allen key with the 3 hexscrews inside the 3 holes, but do not overtighten. Insert thumbscrew B through part A before mounting the Kodak 14n.

Step 2:

Place the Kodak 14n aligned with the tripod mount on thumbscrew B. The bottom plate of the Kodak 14 has to be set that it allocates itself behind the small ridge in block A.

The CCD will be exactly in the optical axis.


Using the L-Bracket for vertical mounting:

Step 1:

Remove thumbscrew B and replace it with the similar thumbscrew C that comes packed with the L-Bracket. C is shorter and will not extend above part A. Place thumbscrew B into part D.

Step 2:

Place the L-Bracket on top of the block A and tighten with thumbscrew C, so that the pattern aligns the L-Bracket D in place. Be sure that thumbscrew C is already fully inserted through A

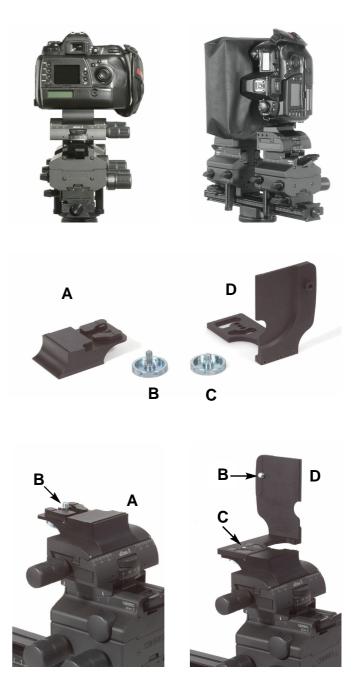

Step 3: Mount the Kodak onto the L-Bracket with the thumbscrew B, aligning with the small ridge at the end. The camera will be placed a bit forward to allow the cables to run free.